

OCT 27 1955

JUSTIFIED LETTER SPACING ATTACHMENT

16KB

Justifying Scale Pointer Lifting Pawl (safety) Pin	16KB2
Justifying Scale Pointer Lifting Pawl (safety) Spring Post	16KB4
Justifying Scale Pointer Lifting Pawl (safety) (assembled)	16KB5K

17KB

Justifying Scale Pointer Operating Lever (assembled)	17KB9K
Justifying Scale Pointer Operating Lever Eccentric Bush	17KB11
Justifying Scale Pointer Operating Lever Fulcrum Pin	17KB12
Justifying Scale Pointer Operating Lever Fulcrum Pin Nut	17KB13
Justifying Scale Pointer Operating Lever Link	17KB14
Justifying Scale Pointer Operating Lever Pin	17KB15
Justifying Scale Pointer Operating Lever Pin Cotter	17KB16
Justifying Scale Pointer Operating Lever Pin Washer	17KB17

20KV

Paper Tower Cover (front, large) (assembled)	20KC10K
--	---------

33KC

Punch Bar (middle "0") (assembled)	33KC8K
Punch Bar (middle, "0") Make-up Plate	33KC9

34KC

Punch Bar Lever (left hand) (bent) (assembled)	a34KC21K
Punch Bar Lever (left hand) (bent) Bracket (assembled)	34KC22K
Punch Bar Lever (left hand) (bent) Connecting Pin	a34KC23
Punch Bar Lever (left hand) (bent) Connecting Pin Operating Sleeve	a34KC24
Punch Bar Lever (left hand) (bent) Return Spring	34KC25
Punch Bar Lever (left hand) (bent) Return Spring Hook Plate. (This part is not required for Keyboards equipped with Unit Adding Attachments a8KU or a8KUL)	34KC26
Punch Bar Lever (left hand) Return Spring Post (bent)	34KC27

84KC

Actuating Lever (assembled)	a84KCLK
Actuating Lever Bush	84KC2
Actuating Lever Bush Collar	84KC3

85KC

Operating Lever (assembled)	a85KCLK
Operating Lever Crank Pin	85KC2
Operating Lever Handle	a85KC3
Operating Lever Handle Pin	85KC4
Operating Lever Locking Plunger	85KC5
Operating Lever Locking Plunger Spring	a85KC6

86KC

Punch Bar Rocking Lever	a86KC1
-------------------------	--------